

Standard Gateway Configuration- Article no. 2035



Resolution Steps

BEFCMU and WCG200 Version 1 Gateway Supported Settings

1. Remote login to the HLAN gateway
2. On the **Wireless** tab, make sure the **Wireless Network** is Enabled by selecting the **Enable** radio button
3. Enter the customer requested **SSID** in the **Network Name** field
4. Use the **following settings** to complete setup



5. Enter the **26-character WEP key** in the following format
 - **CC+AccountNumber+CC+AccountNumber**

- Example: cc09008675309cc09008675309

WCG200 Version 2 Gateway and Standalone Linksys Routers Supported Settings

1. For WCG200 version 2, **remote login to the HLAN gateway**

- For WRT54G2, always connect via **Ethernet cable**

2. On the **Wireless** tab, enter the **SSID** in the **Network Name** field and the following settings



3. On the **Wireless Security** tab, use the following settings



4. Enter the **WPA2 Passphrase** in the field provided made up of **at least 8** alphanumeric characters and is **case sensitive**

- Passphrase must be **at least 8 alphanumeric characters**, and is **case sensitive**

Online URL: <https://agentx-astound-kb-qa.hgsdigital.com/article.php?id=458>